

Active25

Cubit & Anvil System Assembly Instructions

Tools Required: Allen Key



Active25 Cubit & Anvil System

Assembly Instructions

Thank you for purchasing Knight product, please carefully read the assembly instructions prior to installment to gain a complete understanding of the product. It provides you with important information about the safety, use, installation and maintenance.

WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

SAFETY

- The product must be used in a safe manner. Inappropriate use may cause damage to the product and/or cause bodily harm to the user or persons nearby.
- Don't locate furniture in direct sunlight or near air-conditioning inlet or heating radiator.
- Don't put high-temperature or frozen objects on furniture.
- Safely carry product to location of assembly.
- Retain this operation manual and pass it on to any future owner.

SET UP AND INSTALLATION

- Assemble the product according to the assembly instructions.
- To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.
- Place the product a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.

It is recommended that this product is assembled by 2 people.

Any questions contact Knight on 0800 143 143


Due to continuous improvement of our products, our assembly instructions may not be in complete accordance with the product and we apologise in advance.




Active25 Cubit & Anvil System

Assembly Instructions

Parts

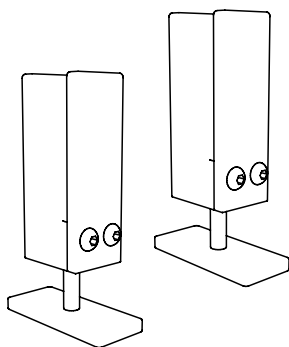

Active25 Cubit/Anvil System Bracket
(2x Brackets required per screen)

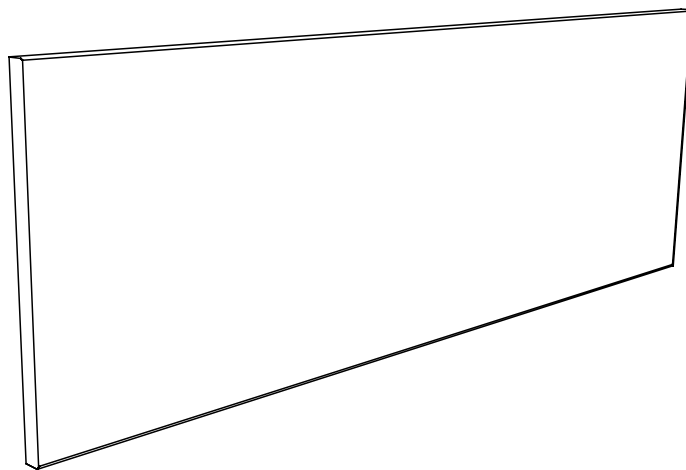

Active25 500mm high Screen
(1500mm or 1800mm depending on desk size)


Tools



Allen Key


Step 1

Remove bolt and plate from the body of the bracket. Place bolt through the centre gap between the two worktops with plate flush against the underneath of the worktop surfaces.

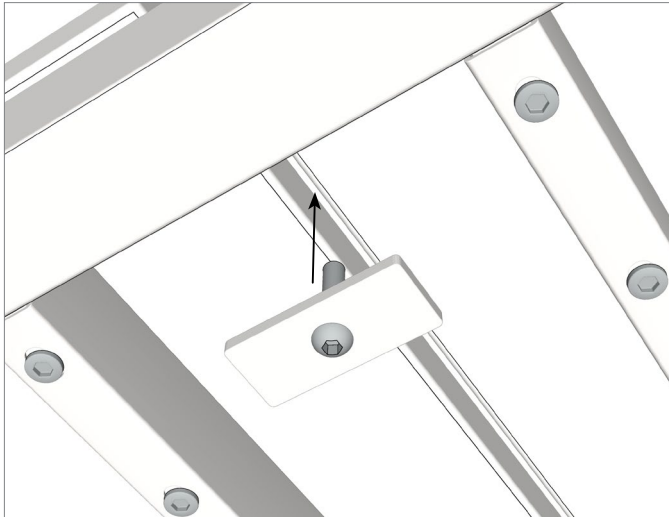


Step 2

Place the body of the bracket on top of the worktops and align with the bolt from underneath. Screw the bolt into the base of the bracket body - DO NOT fully tighten.

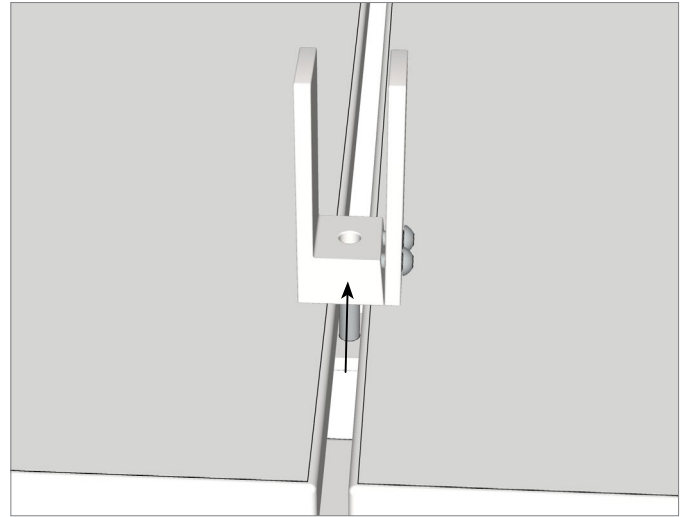


Step 3

Align bracket approx 100mm from the edge of the worktops and tighten bolt underneath using the allen key. Repeat previous steps for the second bracket.

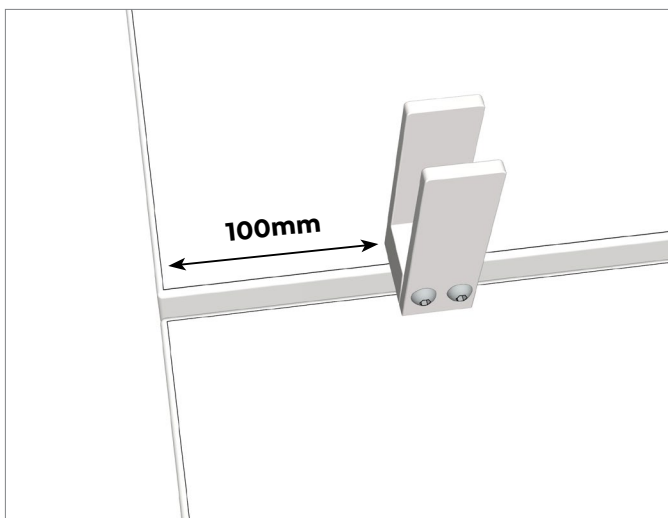


Step 4

Slightly loosen bolts on the side of the bracket body to allow for the screen to fit in between.

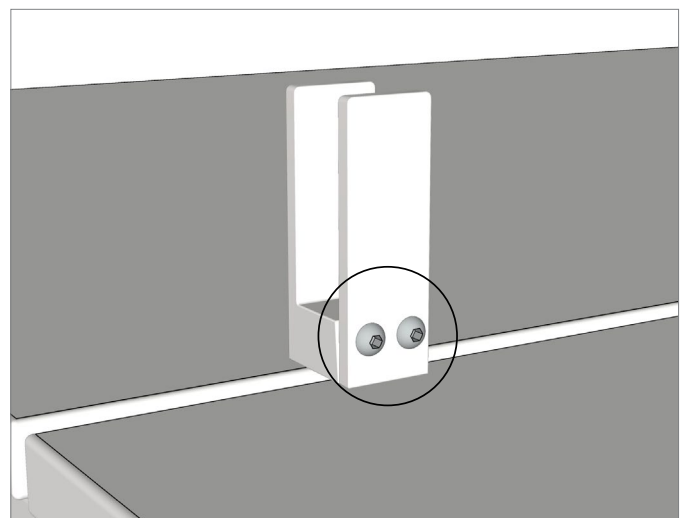


Step 5

Gently place the screen from above into the gaps in the brackets. Move the screen left or right to align to the centre of the worktop.

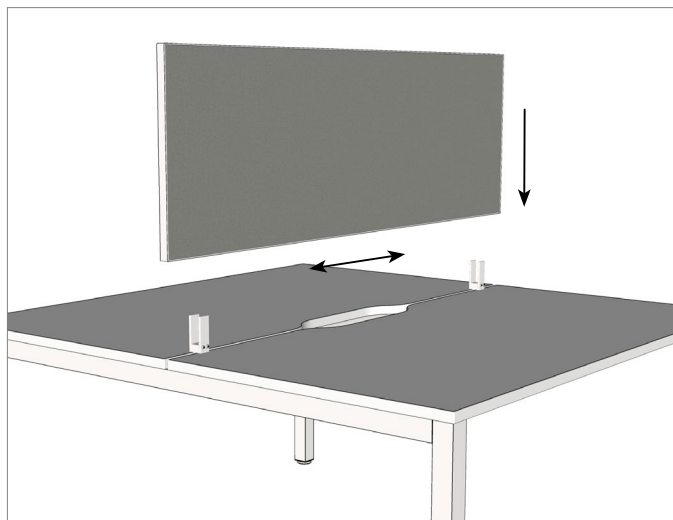

Step 6

Once screen is in the brackets tighten bolts on the side of the bracket body to hold the screen in place.

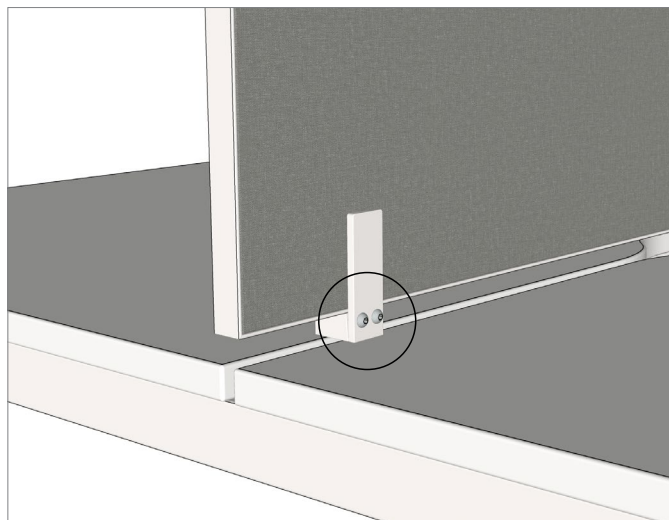

Complete

