


Cubit Reception












Assembly Instructions

Tools Required: Powered screwdriver.

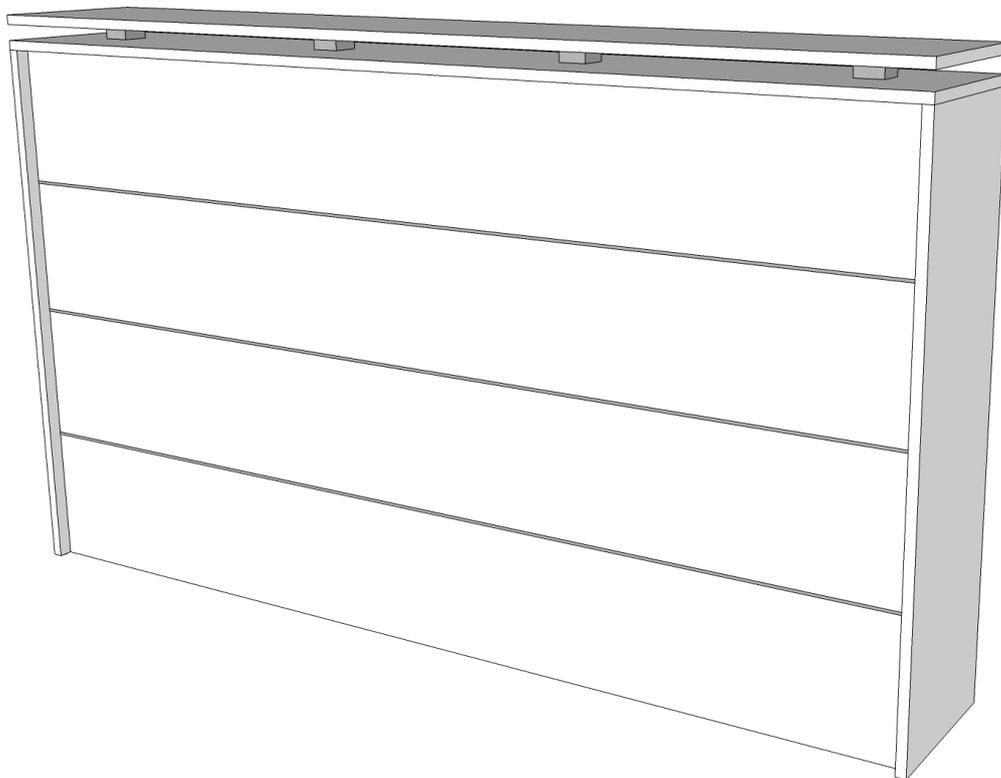


Assembly Instructions


· To prevent possible scratches or damage, assemble the reception on a soft surface such as a blanket, carpet or packaging.

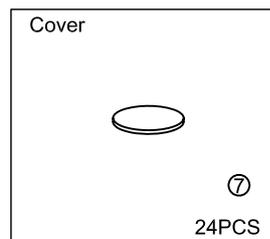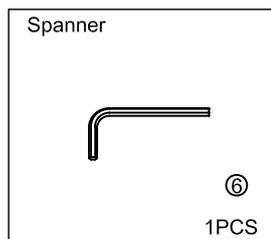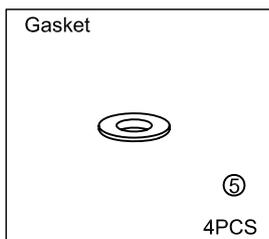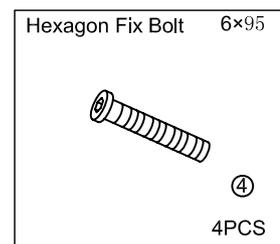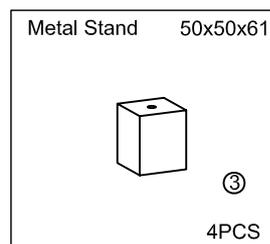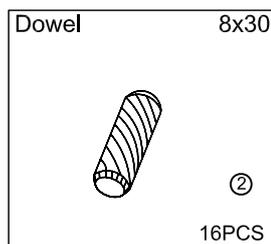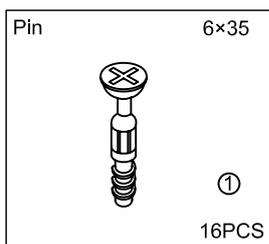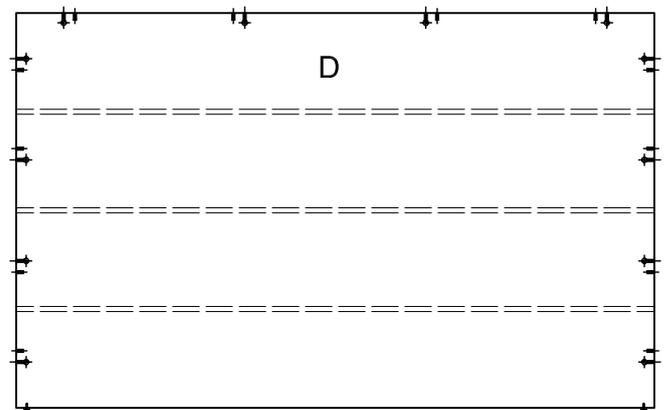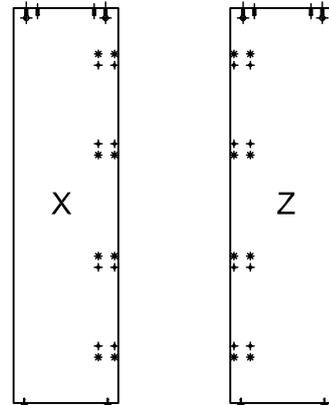


Step 1

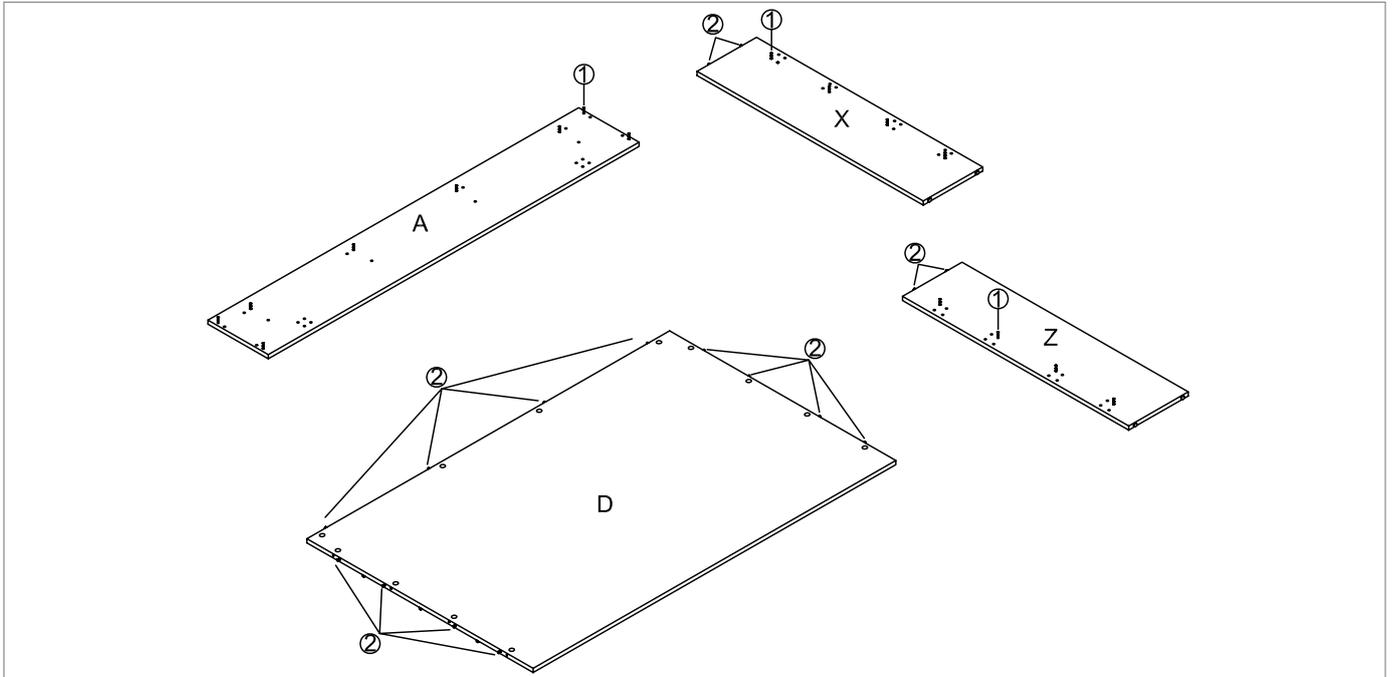


Step 2

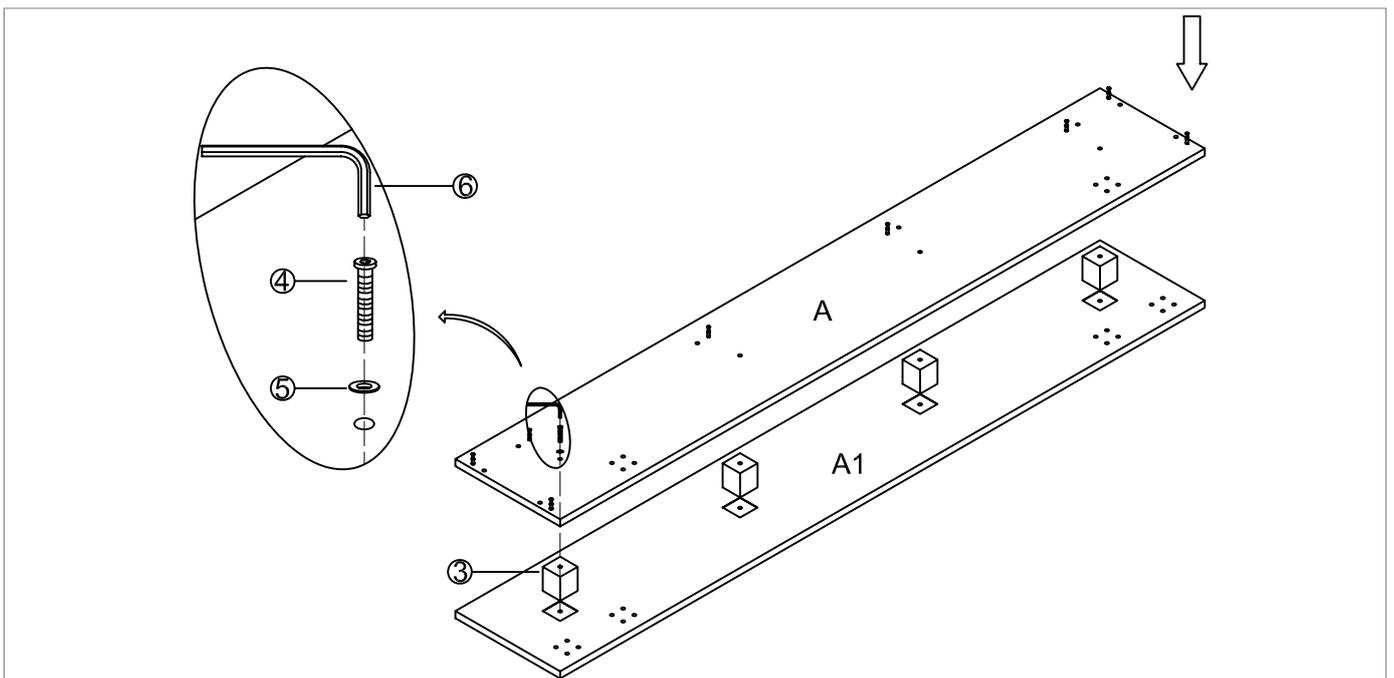

Step 3

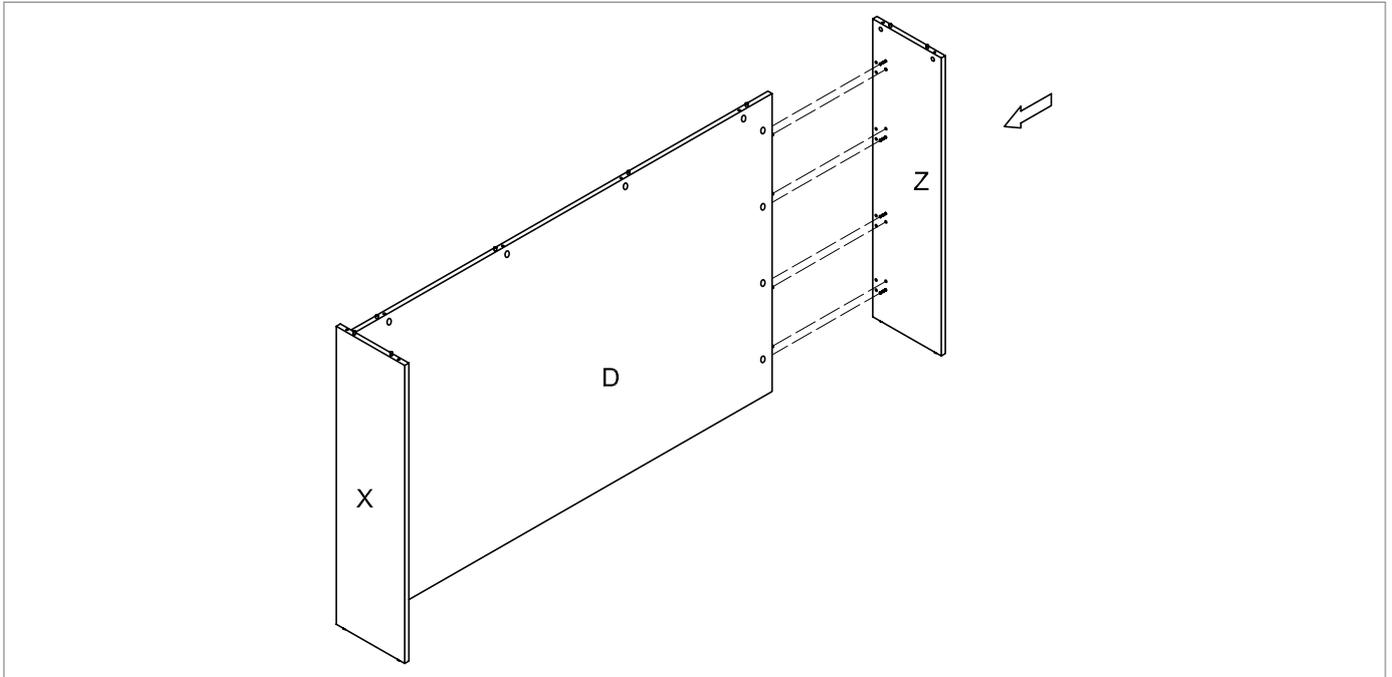

Step 4

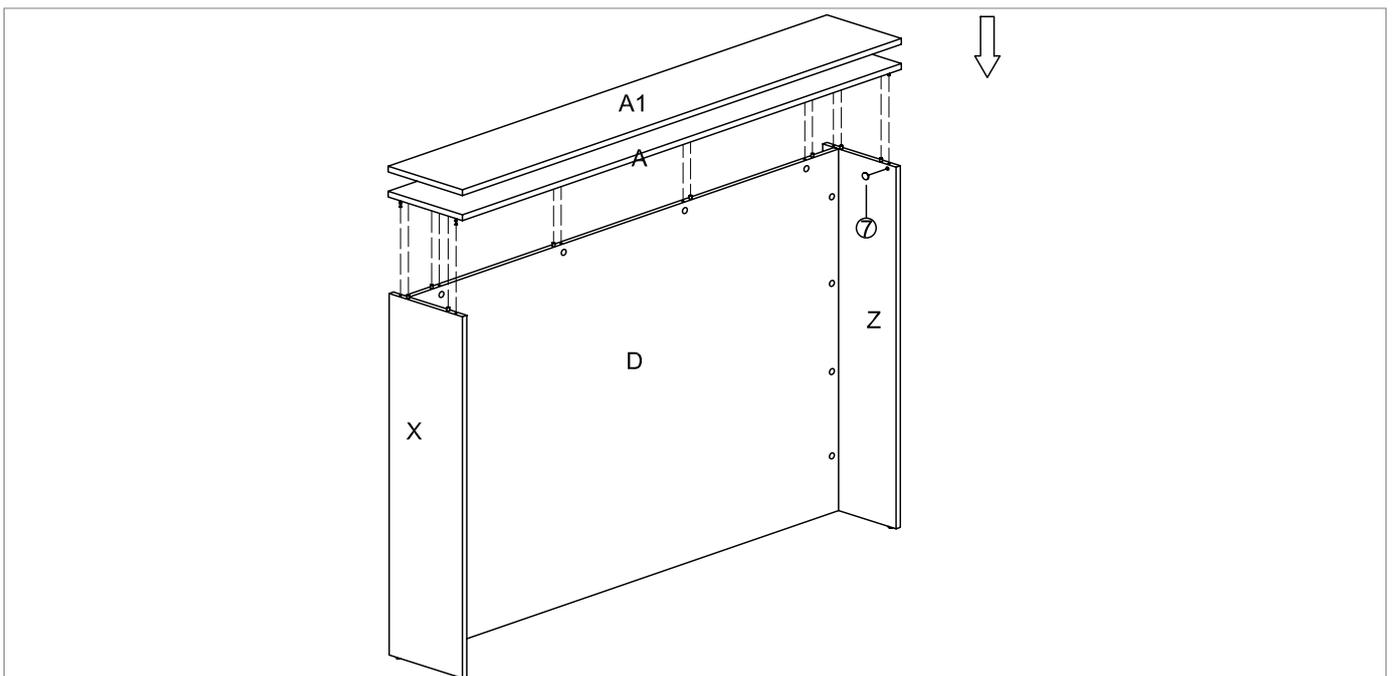

Complete

